




FOR LOCATION OF ED93F-MED SERIES MORTISE RIM DEVICE. USING PULL TRIM, OR LEVER HANDLE TRIM  
VERTICAL CENTER LINE  
SEE INSTALLATION INSTRUCTION

VERTICAL CENTER LINE

TEMPLATE FOR RIM EXIT DEVICES

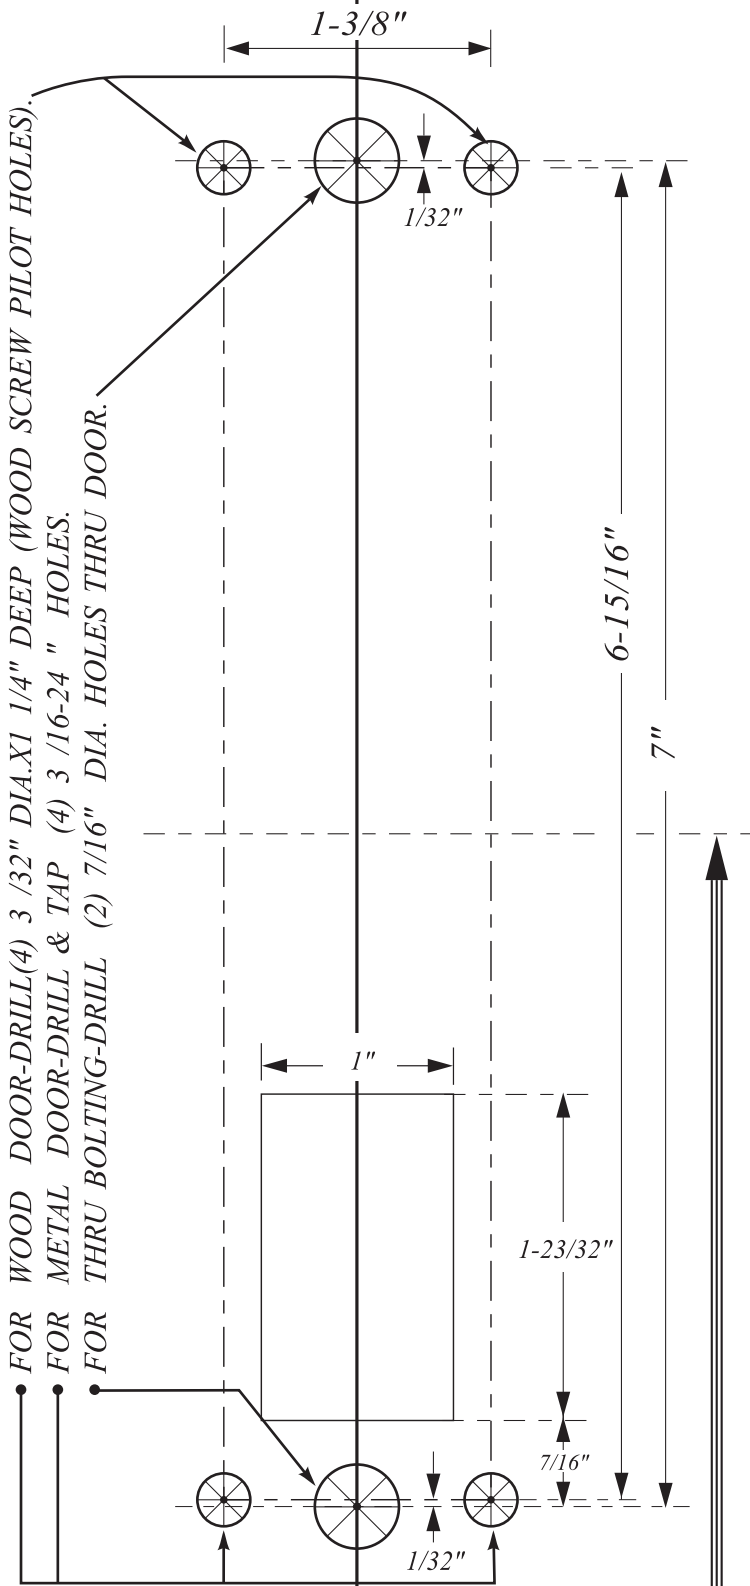

FOR WOOD DOOR-DRILL (4) 3/32" DIA. X 1/4" DEEP (WOOD SCREW PILOT HOLES).  
FOR METAL DOOR-DRILL & TAP (4) 3/16-24" HOLES.  
FOR THRU BOLTING-DRILL (2) 7/16" DIA. HOLES THRU DOOR.

(CHECK HARDWARE SCHEDULE SPECIFICATION FOR VARIATION)

EXIT DEVICE PUSH BAR 41" FROM FINISHED FLOOR