


TEMPLATE FOR DC90 SERIES DOOR CLOSER PARALLEL ARM INSTALLATION

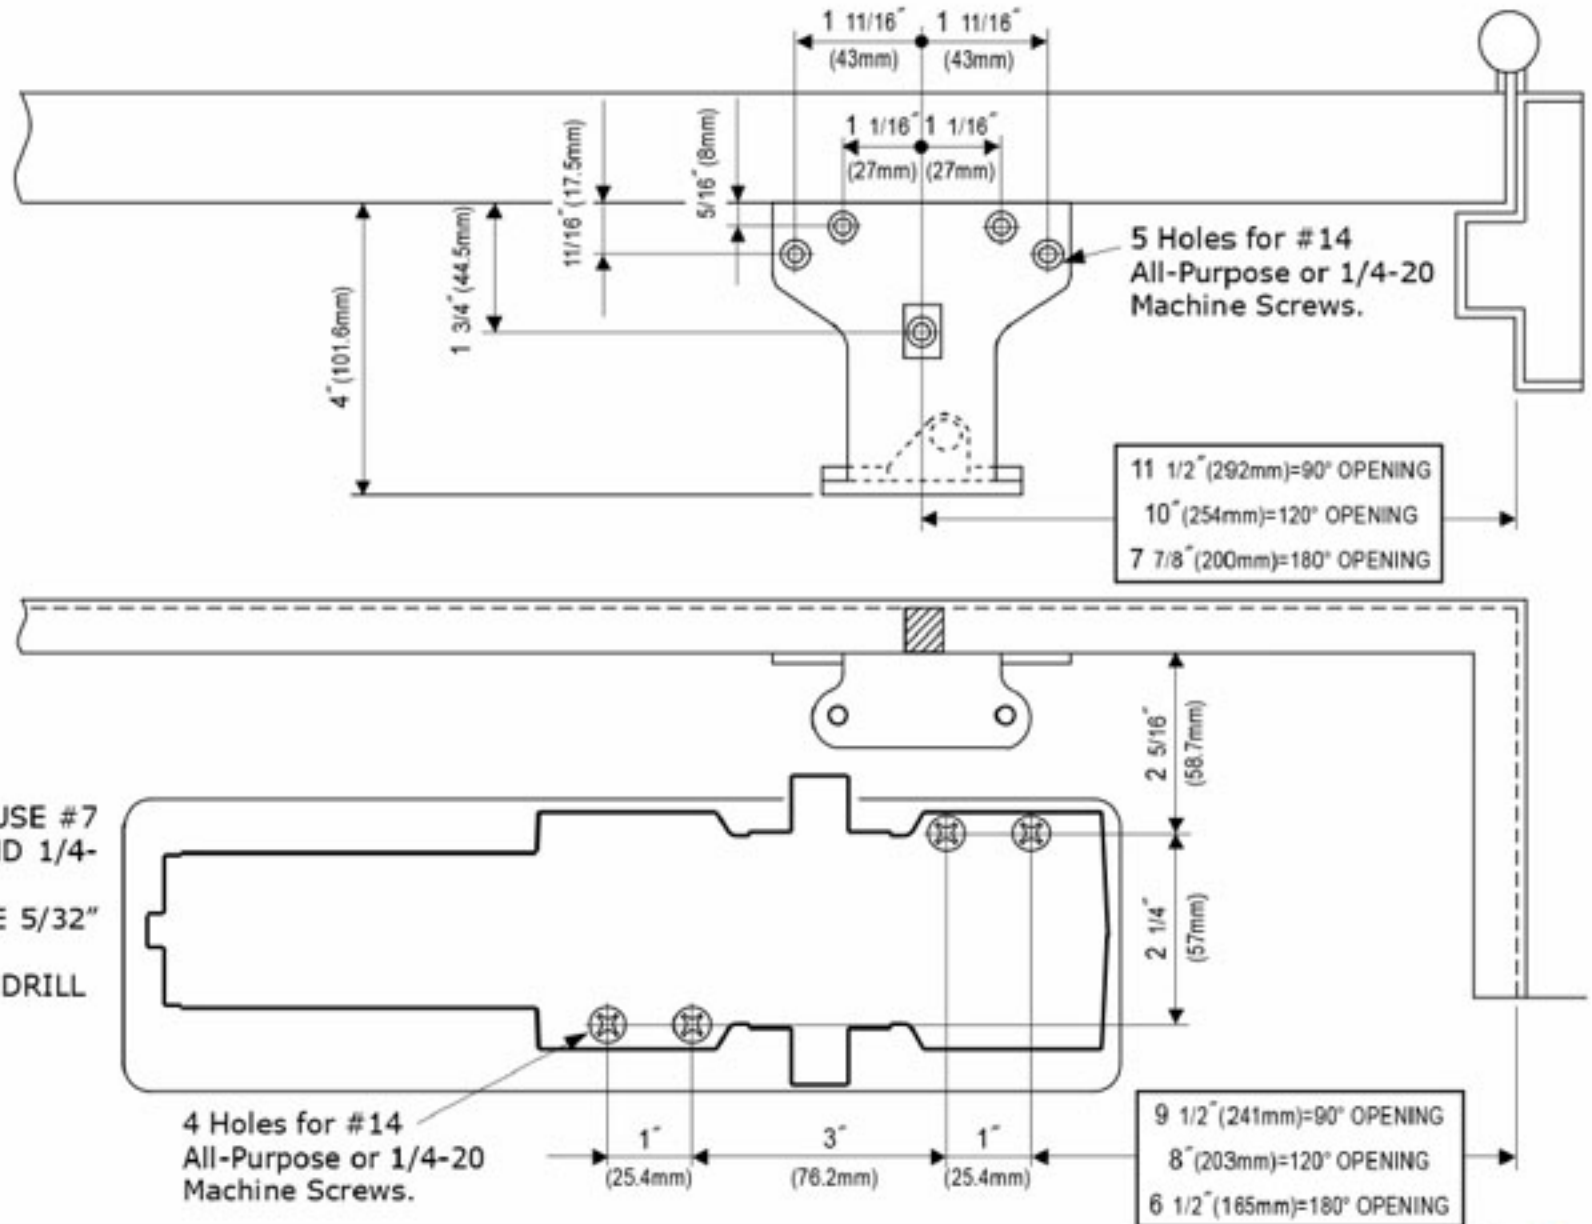

MACHINE SCREWS: USE #7 OR 13/64" DRILL AND 1/4-20 TAP
WOOD SCREWS: USE 5/32" PILOT DRILL
SEX NUTS: USE 3/8" DRILL

RIGHT HAND DOOR shown.

For LEFT HAND DOOR ROTATE CLOSER BODY 180° CLOCKWISE.

INSTALL BODY & SHOE IN REFERENCE TO OPPOSING HINGE/PIVOT LOCATION